


#### EXC-BC155BRH **LED Flood Light** Description EXC-BC155BRH Light tree lamp are high power outdoor landscape flood lighting fixture with high strength aluminum alloy housing by EXC-LED. Each lighting fixture can be used for accent lighting or flood lighting, such as ancient buildings,landscape garden,etc. Features The newest generation technology: DMX512 • parallel bus design • A new generation of structural waterproof design High strength aluminum and low thermal • resistance path cooling design High reliability modularization design • **Application Environment:** Indoor Adjustable angle 0 degree ~15 degree, Outdoor glass surface tilt 5 degree design Outdoor lighting protection and electrostatic discharge (ESD) protection design Load safety design Projection distance: 1-5m

Basic Specifications	
Color Range	W(2200K-6500K)
Working Voltage	AC 220V
Max. Power Consumption	18W(R+G+B, RGBW), 24W(W, R+G+B)
Light Source	9(W, RGBW), 3+3+3(R+G+B)PCS High Power LEDs
LED chip Brand	Optional(Cree, OSRAM, Lumileds, Epistar, etc)
CRI	80
Control	DMX512, ON/OFF
Source Life	50,000 h
Housing	High Strength Aluminum
Cover	Tempered glass
Weight	2.33Kg
Dimensions	155mm x 155mm x 218mm (L x W x H, exclude Mounting Bracket)

## 深圳爱克莱特科技股份有限公司



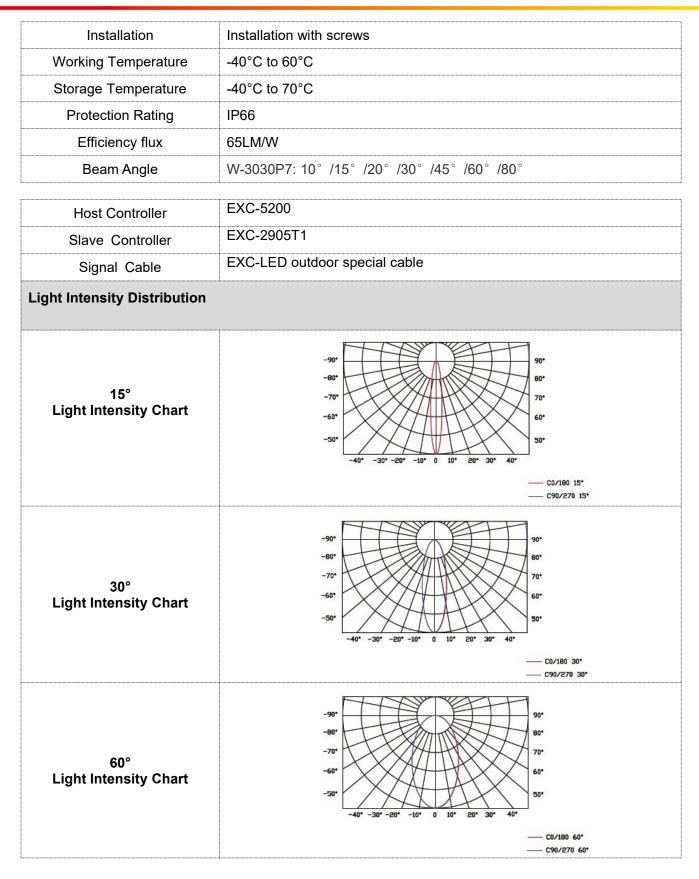

## 深圳爱克莱特科技股份有限公司 Shenzhen EXC-LED Technology Co.,Ltd

深圳市光明区凤凰街道塘家社区科农路589号爱克股份产业园1栋101 101. Building 1, EXC Stock Industrial Park, No. 589, Kenong Road, Tangjia Community, Fenghuang Street, Guangming District, Shenzhen


# EXC 爱克

Physical Dimension
Unit, mm

Ø 155
Image: Constant of the second seco

1. Use M5 screws to fix the lamp mounting bracket to the required position as shown in the figure. Lock the fixing screw of the mounting seat, adjust the angle of the lamp and then lock the connecting screws. Secure the installation.

2. Loosen the angle-adjustable screw, confirm the installation angle, and tighten the angle-adjustable screw.

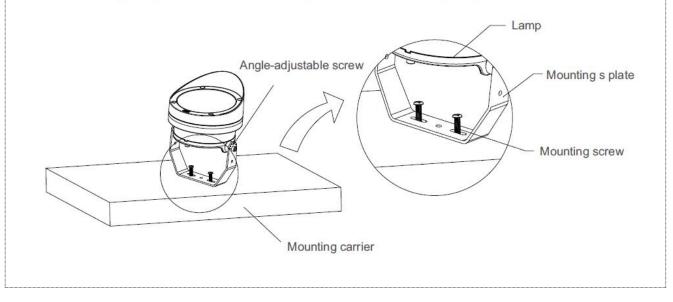





#### System connection diagram:

- 1. Host controller should connect with slave controller. Working voltage for controllers are AC220V.
- 2. On-line main controller should connect with slave controller, on-line main controller and sub controller working voltage are AC220V.
- 3、each sub-controller with 8 ports, with each port 512 pixels, supporting data converter, supports 100 meters ultra-long haul transmission.
- 4. The CAT-5 e. cable distance should be within 100 meters between host controller and slave controller, between slave controllers and switch, etc.

### **Offline Controlling System Diagram**

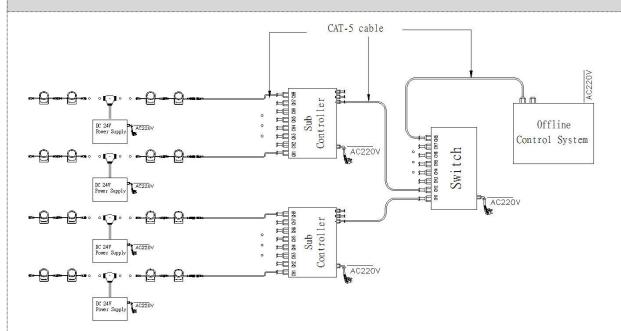

#### **Online Controlling System Diagram**

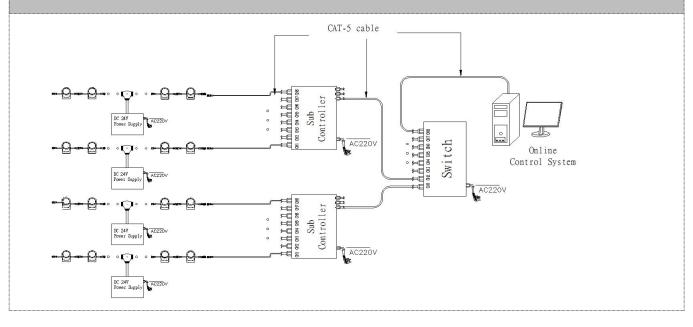

## 深圳爱克莱特科技股份有限公司 Shenzhen EXC-LED Technology Co.,Ltd

#### 深圳市光明区凤凰街道塘家社区科农路589号爱克股份产业园1栋101 101. Building 1, EXC Stock Industrial Park, No. 589, Kenong Road, Tangjia Community, Fenghuang Street, Guangming District, Shenzhen

Http://www.exc-led.com E-mail: exc@exc-led.com

Tel: 4008-777-189



